

LOCATE RELEASE BUTTONS ON HEADRESTS

STEP 1




DEPRESS RELEASE  
BUTTONS AND REMOVE  
HEADRESTS

STEP 2



FLIP UP CUSHIONS

STEP 3

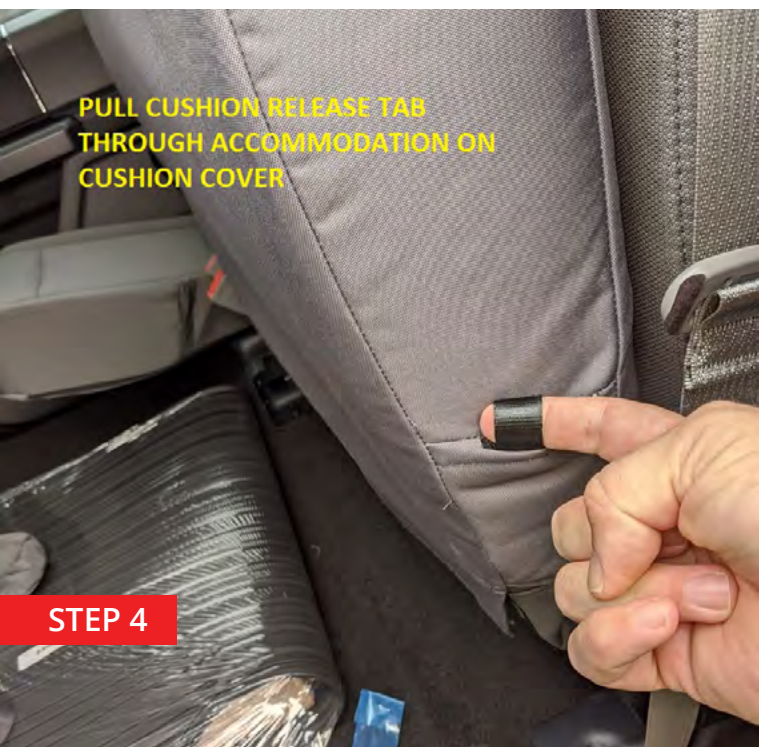

PULL CUSHION RELEASE TAB  
THROUGH ACCOMMODATION ON  
CUSHION COVER

STEP 4




PLACE COVER OVER CUSHION  
AND REMOVE PROTECTIVE  
COVER FROM VELCRO STRIP

STEP 3a



PUSH CARPET TABS BETWEEN  
BACKREST & CUSHION  
(TILT CUSHION UP FOR BETTER ACCESS)

STEP 5

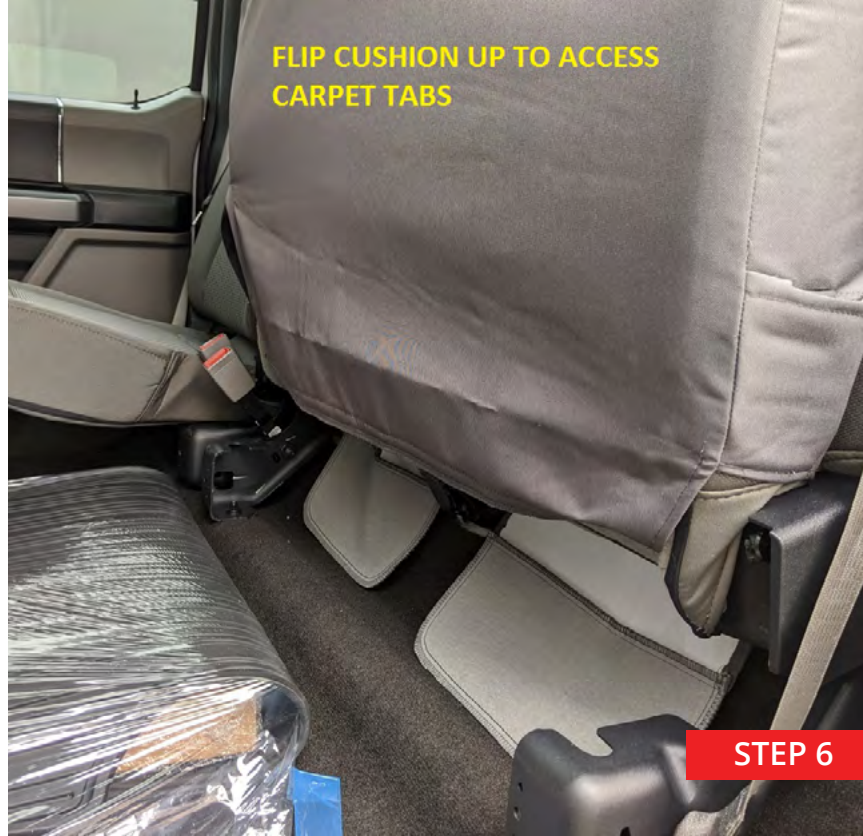

FLIP CUSHION UP TO ACCESS  
CARPET TABS

STEP 6




PULL CARPET TABS TAUGHT  
AND ATTACH THEM TO THE  
VELCRO STRIPS ON THE  
BOTTOM OF THE CUSHION  
COVER

STEP 7



FLIP CUSHION DOWN  
AND ADJUST TO FIT

STEP 9

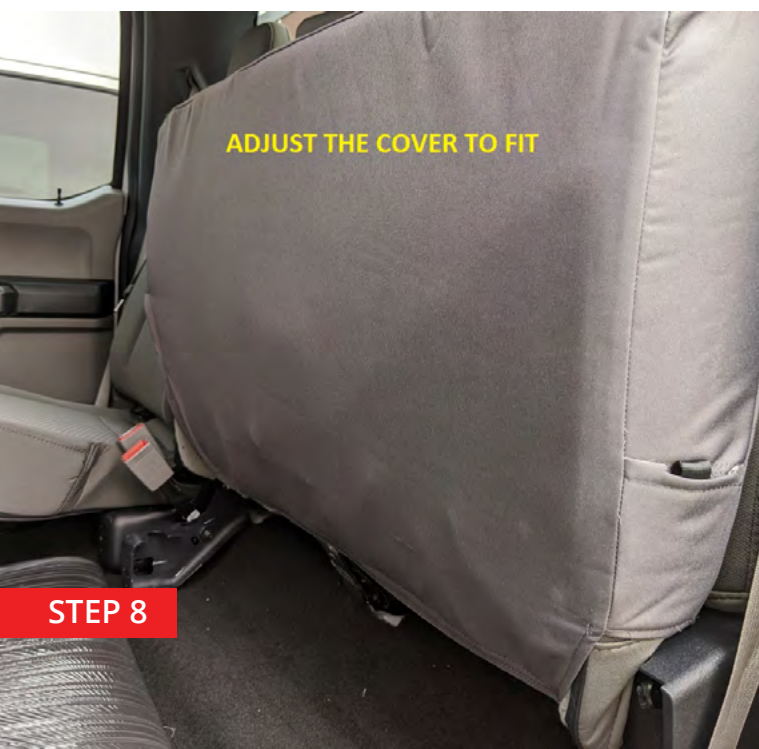

ADJUST THE COVER TO FIT

STEP 8



**PLACE BACKREST COVER  
UNDER SHOULDER BELT**

**STEP 10**




**REMOVE PROTECTIVE COVER  
FROM VELCRO AND WRAP TOP  
OF COVER BEHIND BACKREST  
AND ADJUST TO FIT**

**STEP 11**



**PUSH HEADREST BRACKETS  
THROUGH HEADREST HOLES  
ON COVER AND TUCK SIDES  
TO FIT**

**STEP 12**

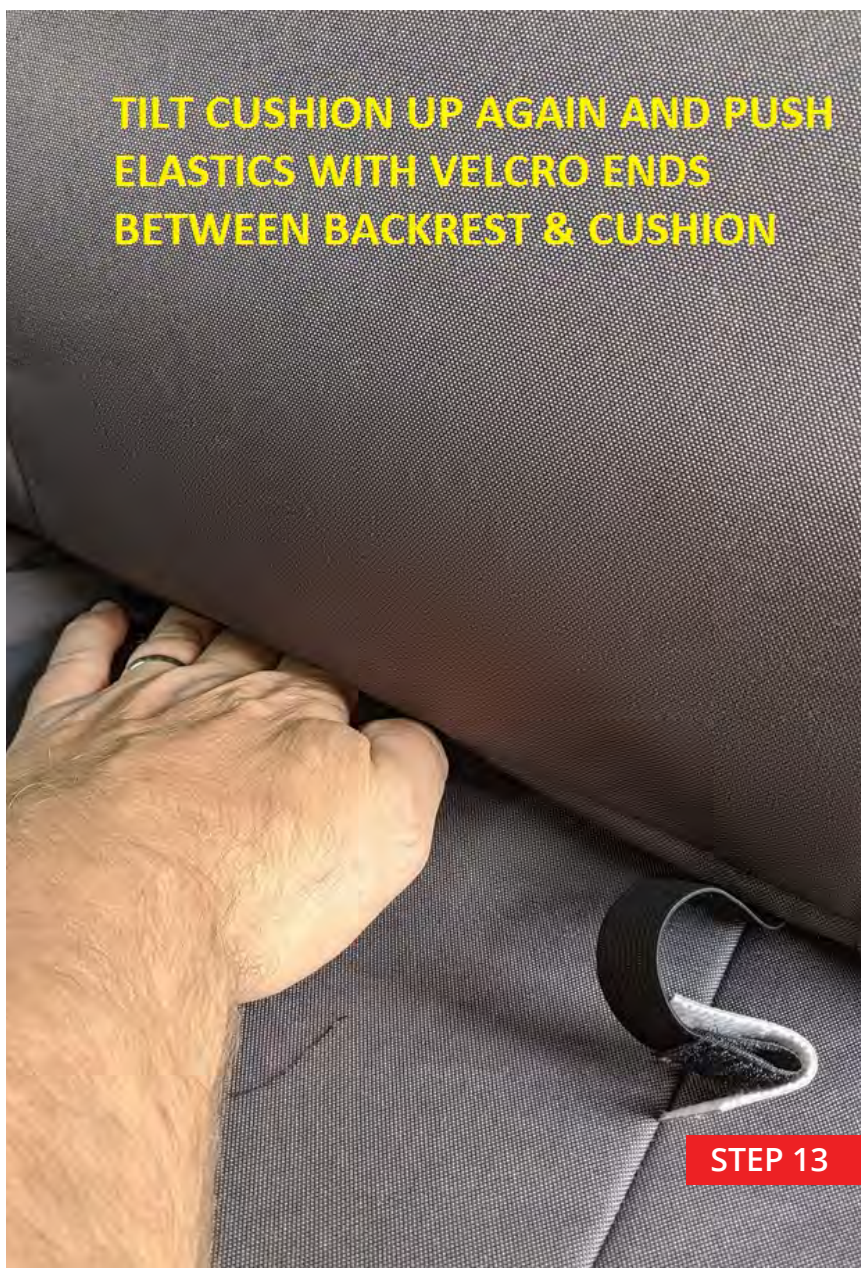

**TILT CUSHION UP AGAIN AND PUSH  
ELASTICS WITH VELCRO ENDS  
BETWEEN BACKREST & CUSHION**

**STEP 13**



**PUSH SIDE ELASTICS WITH VELCRO  
ENDS IN BEHIND THE BACKRESTS**

**STEP 14**

FLIP CUSHION UP AND CONFIRM ALL ELASTIC TABS WITH VELCRO ARE ACCESSIBLE



STEP 15

REMOVER THE PROTECTIVE COVER FROM THE ELASTIC TABS




STEP 16



ATTACH THE ELASTIC TABS FROM THE BACKREST COVER TO THE CARPET TABS OF THE CUSHION COVER WITH MEDIUM TENSION

STEP 17

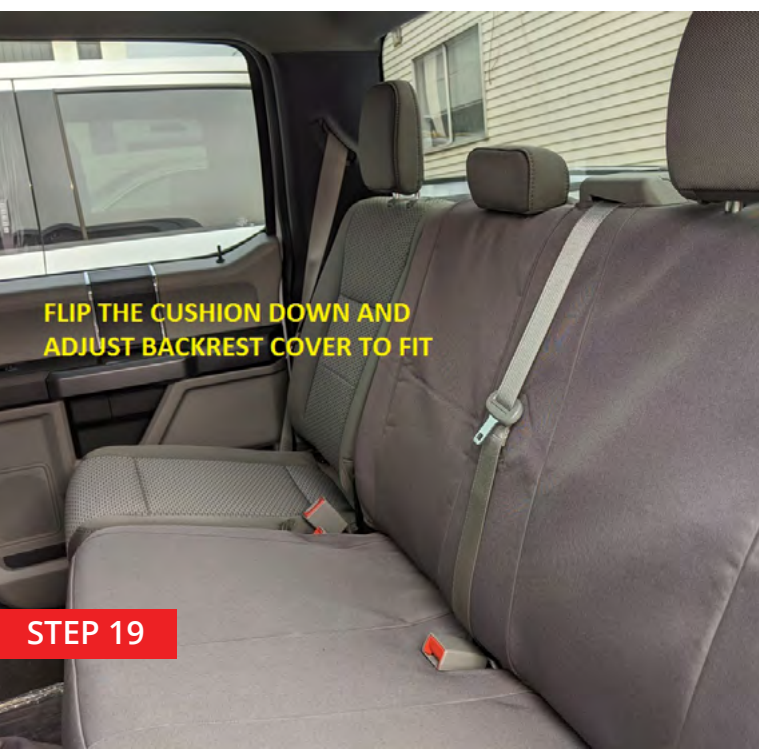

FLIP THE CUSHION DOWN AND ADJUST BACKREST COVER TO FIT

STEP 19



CONFIRM ALL ELASTIC TABS WITH VELCRO ARE ATTACHED TO THE CUSHION COVER

STEP 18